




# MAIN CIRCUIT DIAGRAM

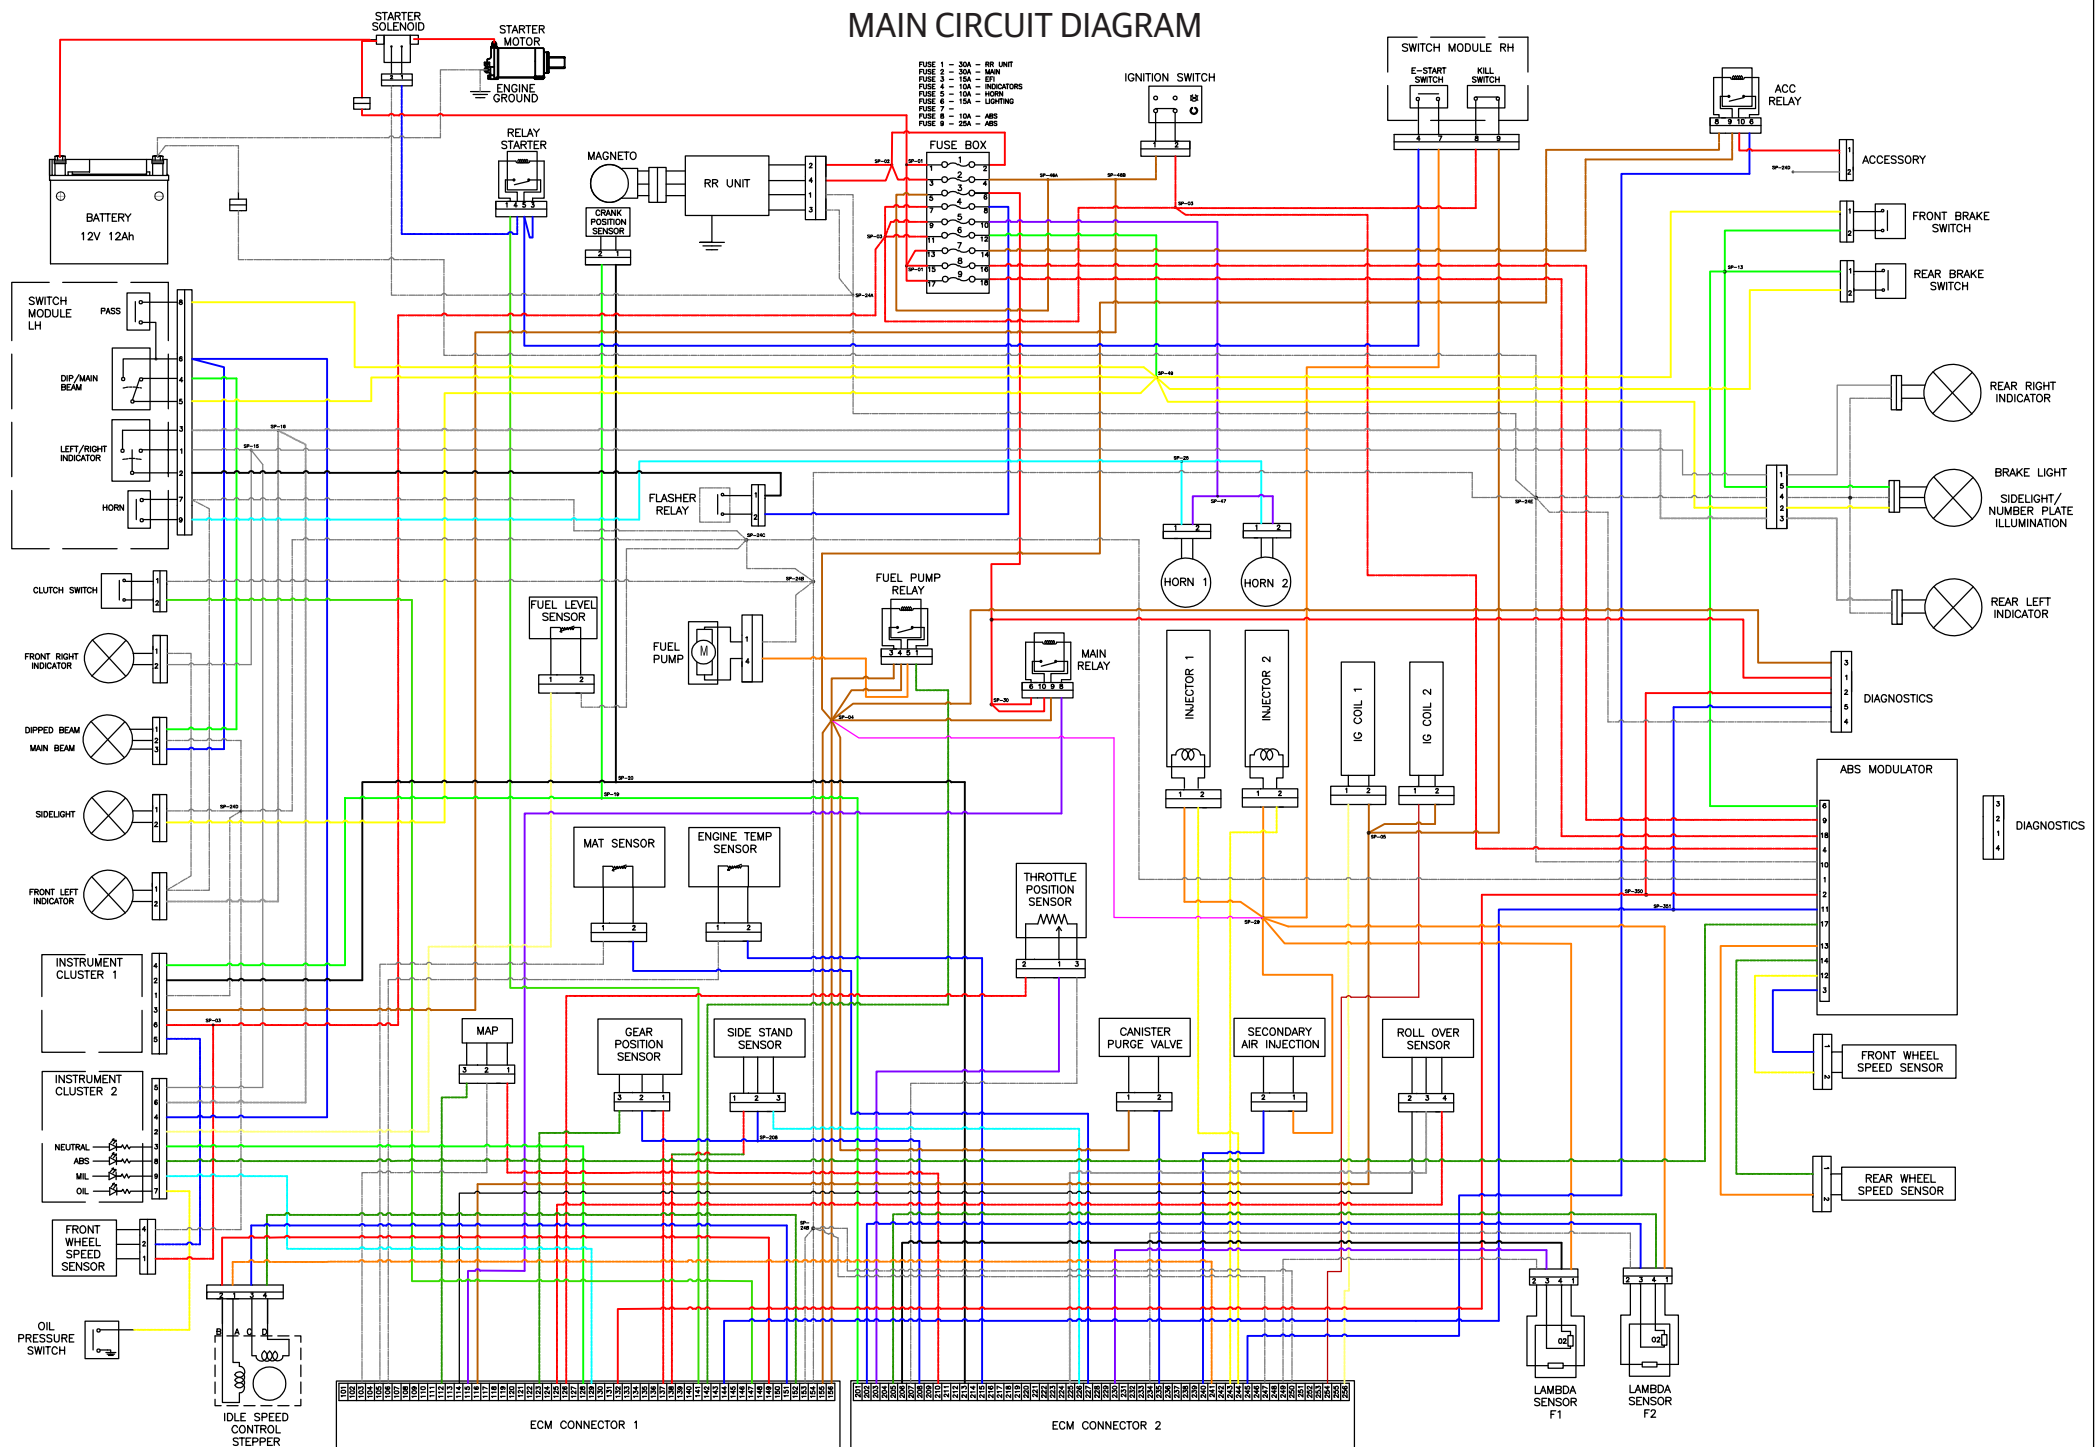


# WIRING HARNESS - STARTING SYSTEM

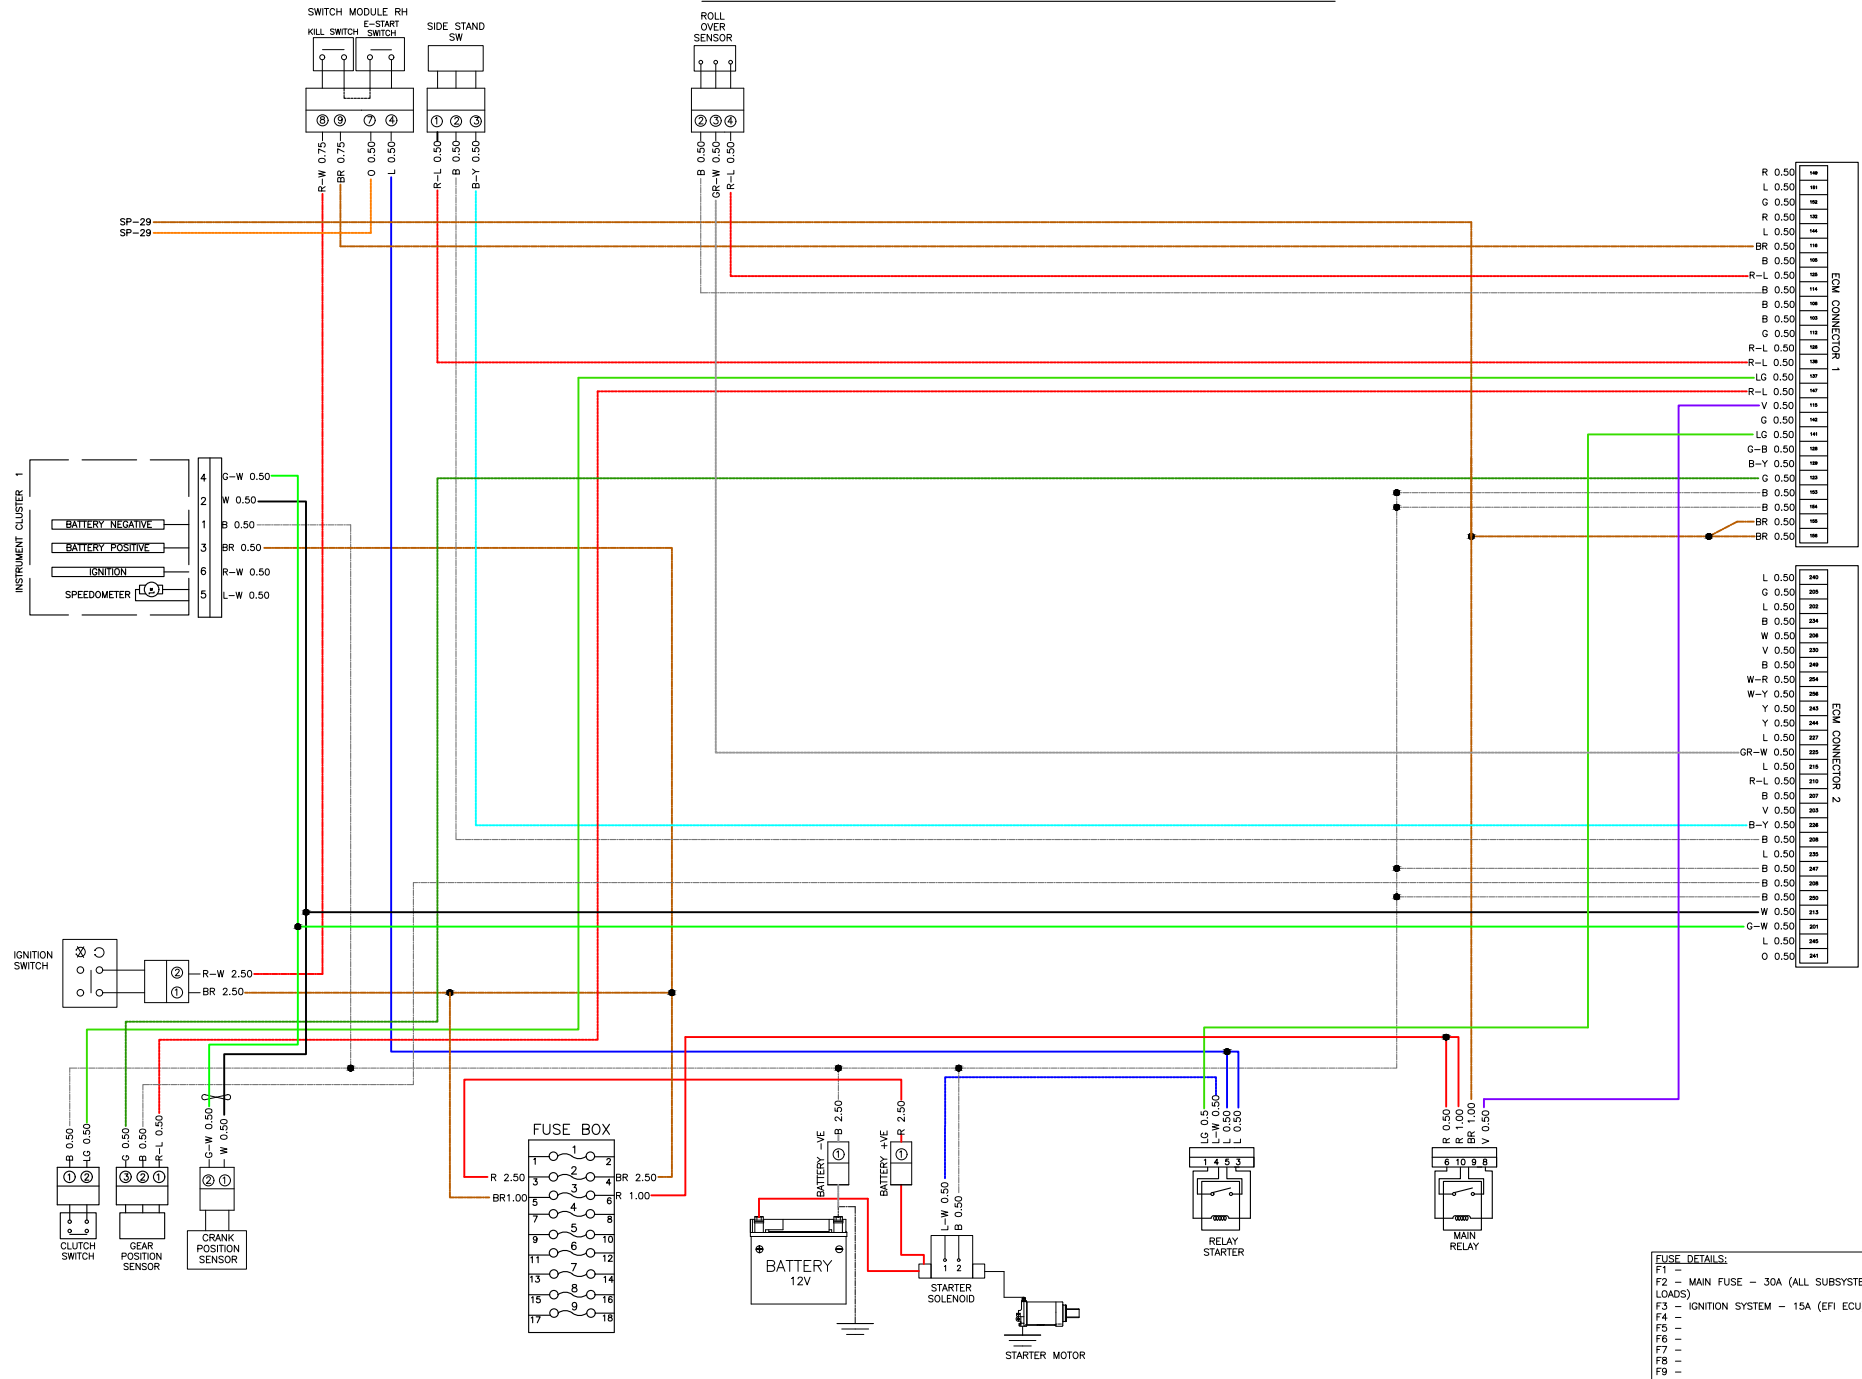


# WIRING HARNESS – STARTING, CHARGING & IGNITION (EFI) SYSTEM

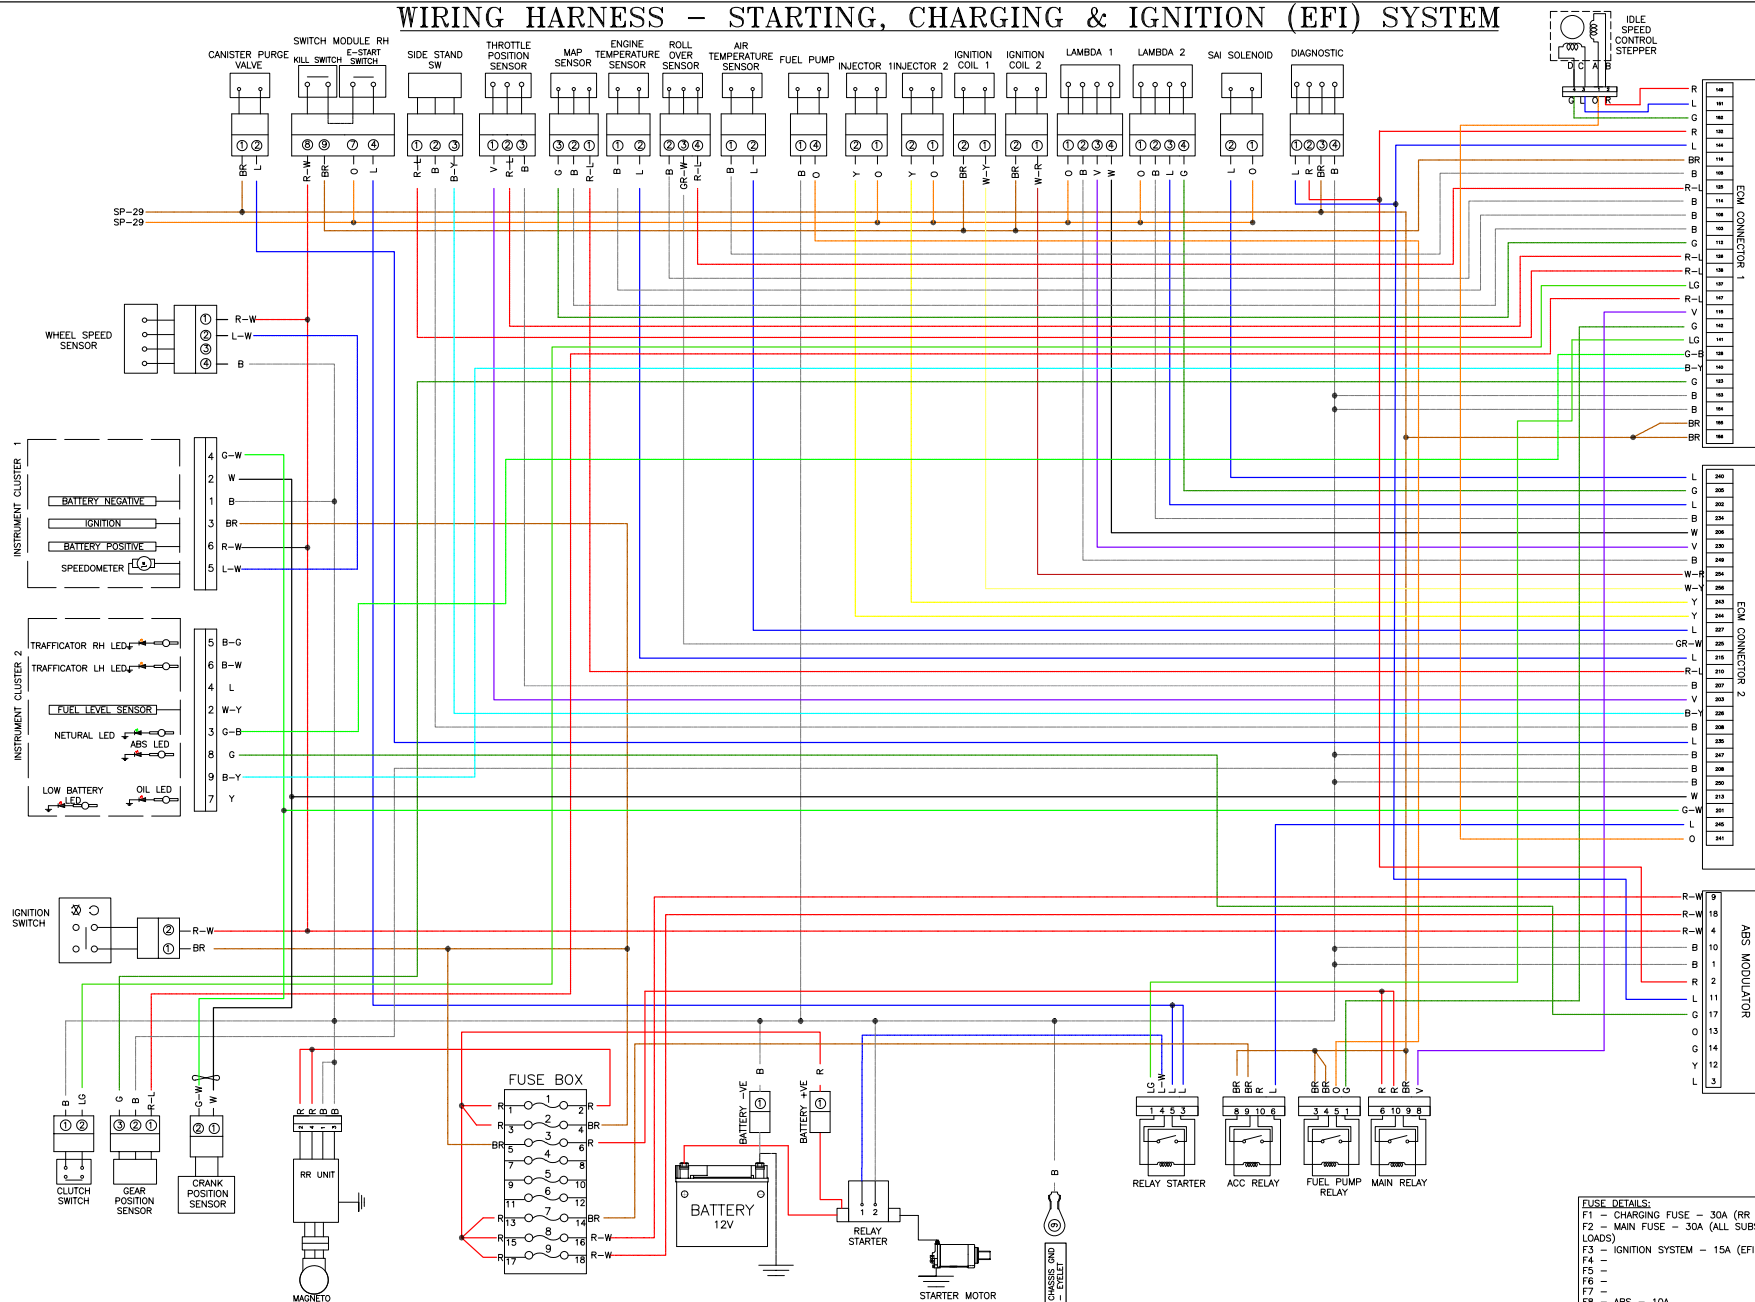


## WIRING HARNESS – SIGNALING SYSTEM

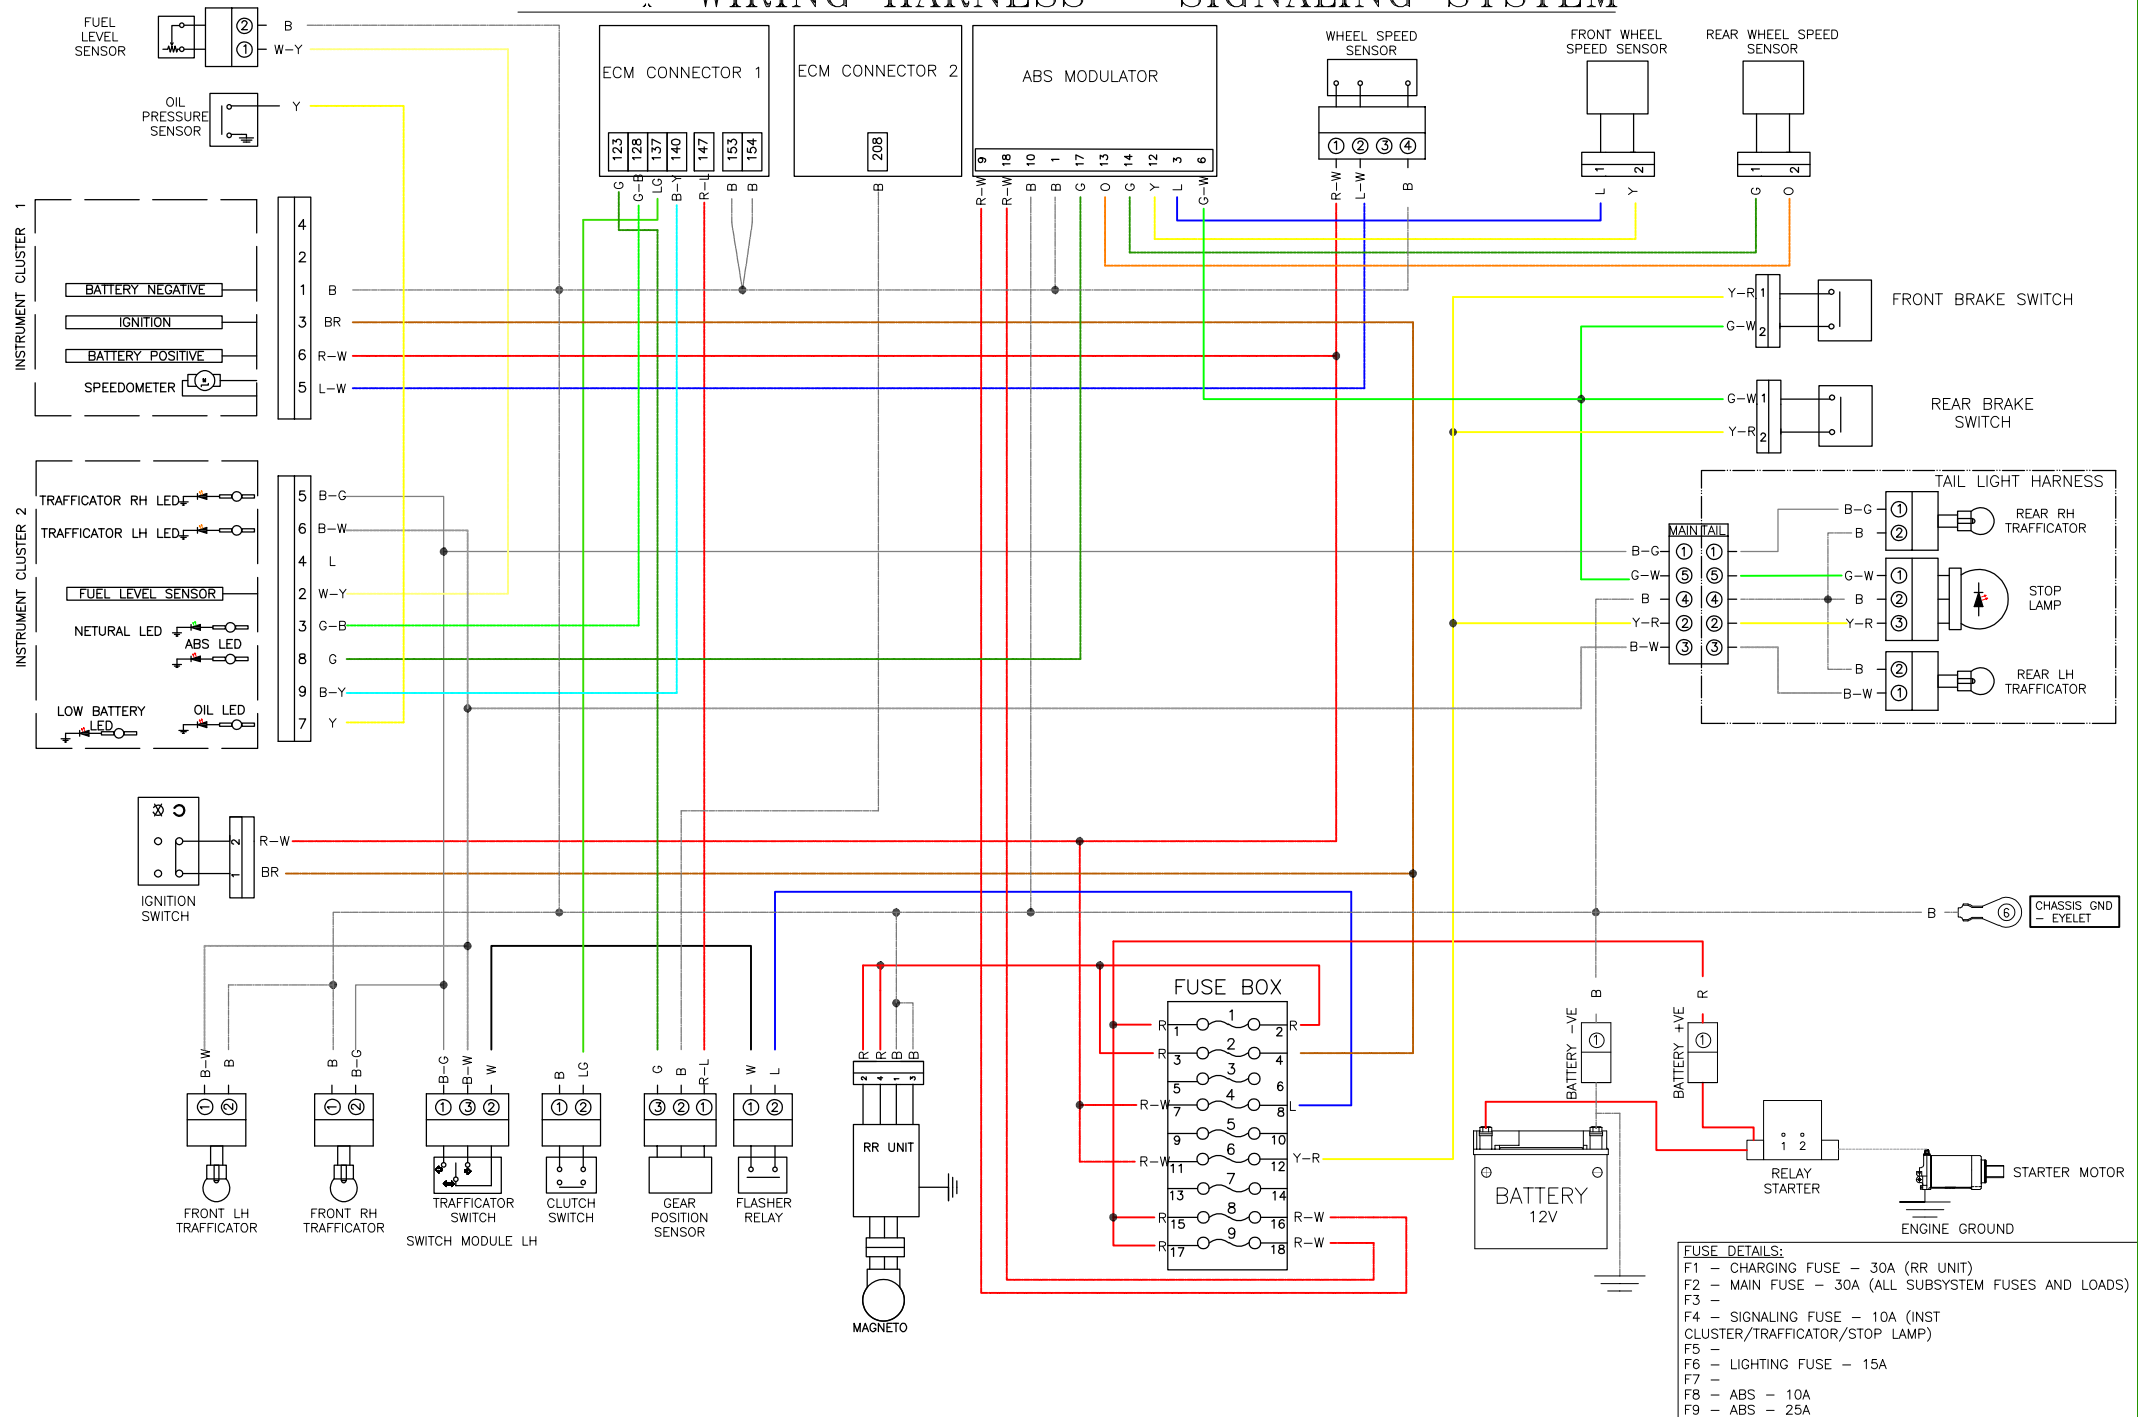

# WIRING HARNESS – LIGHTING SYSTEM

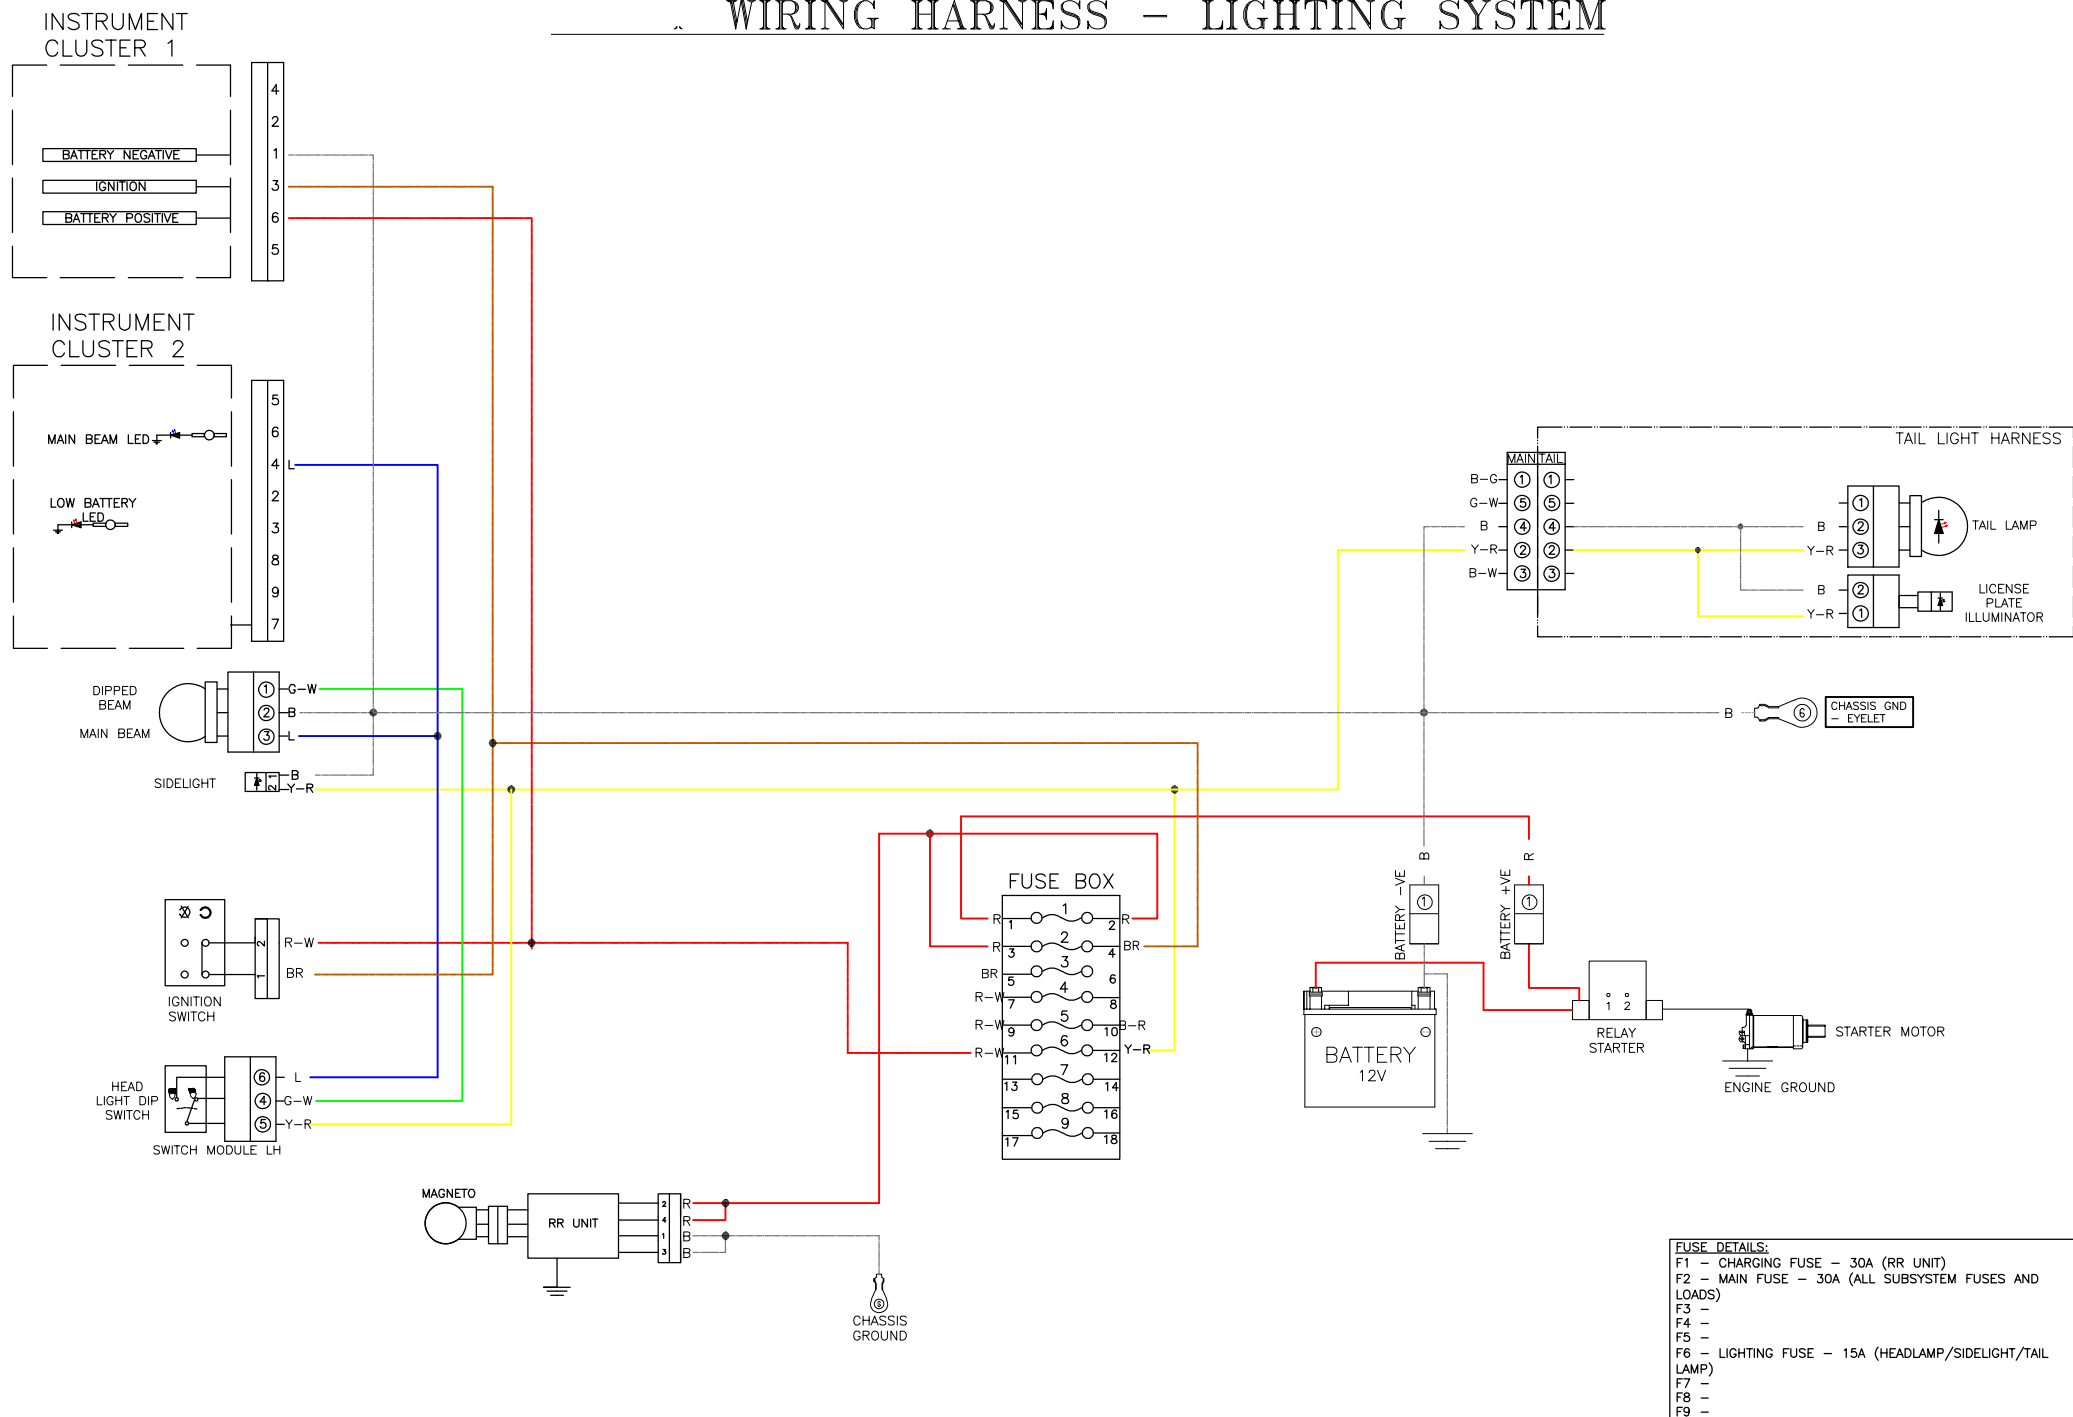

# WIRING HARNESS – ABS MODULATOR

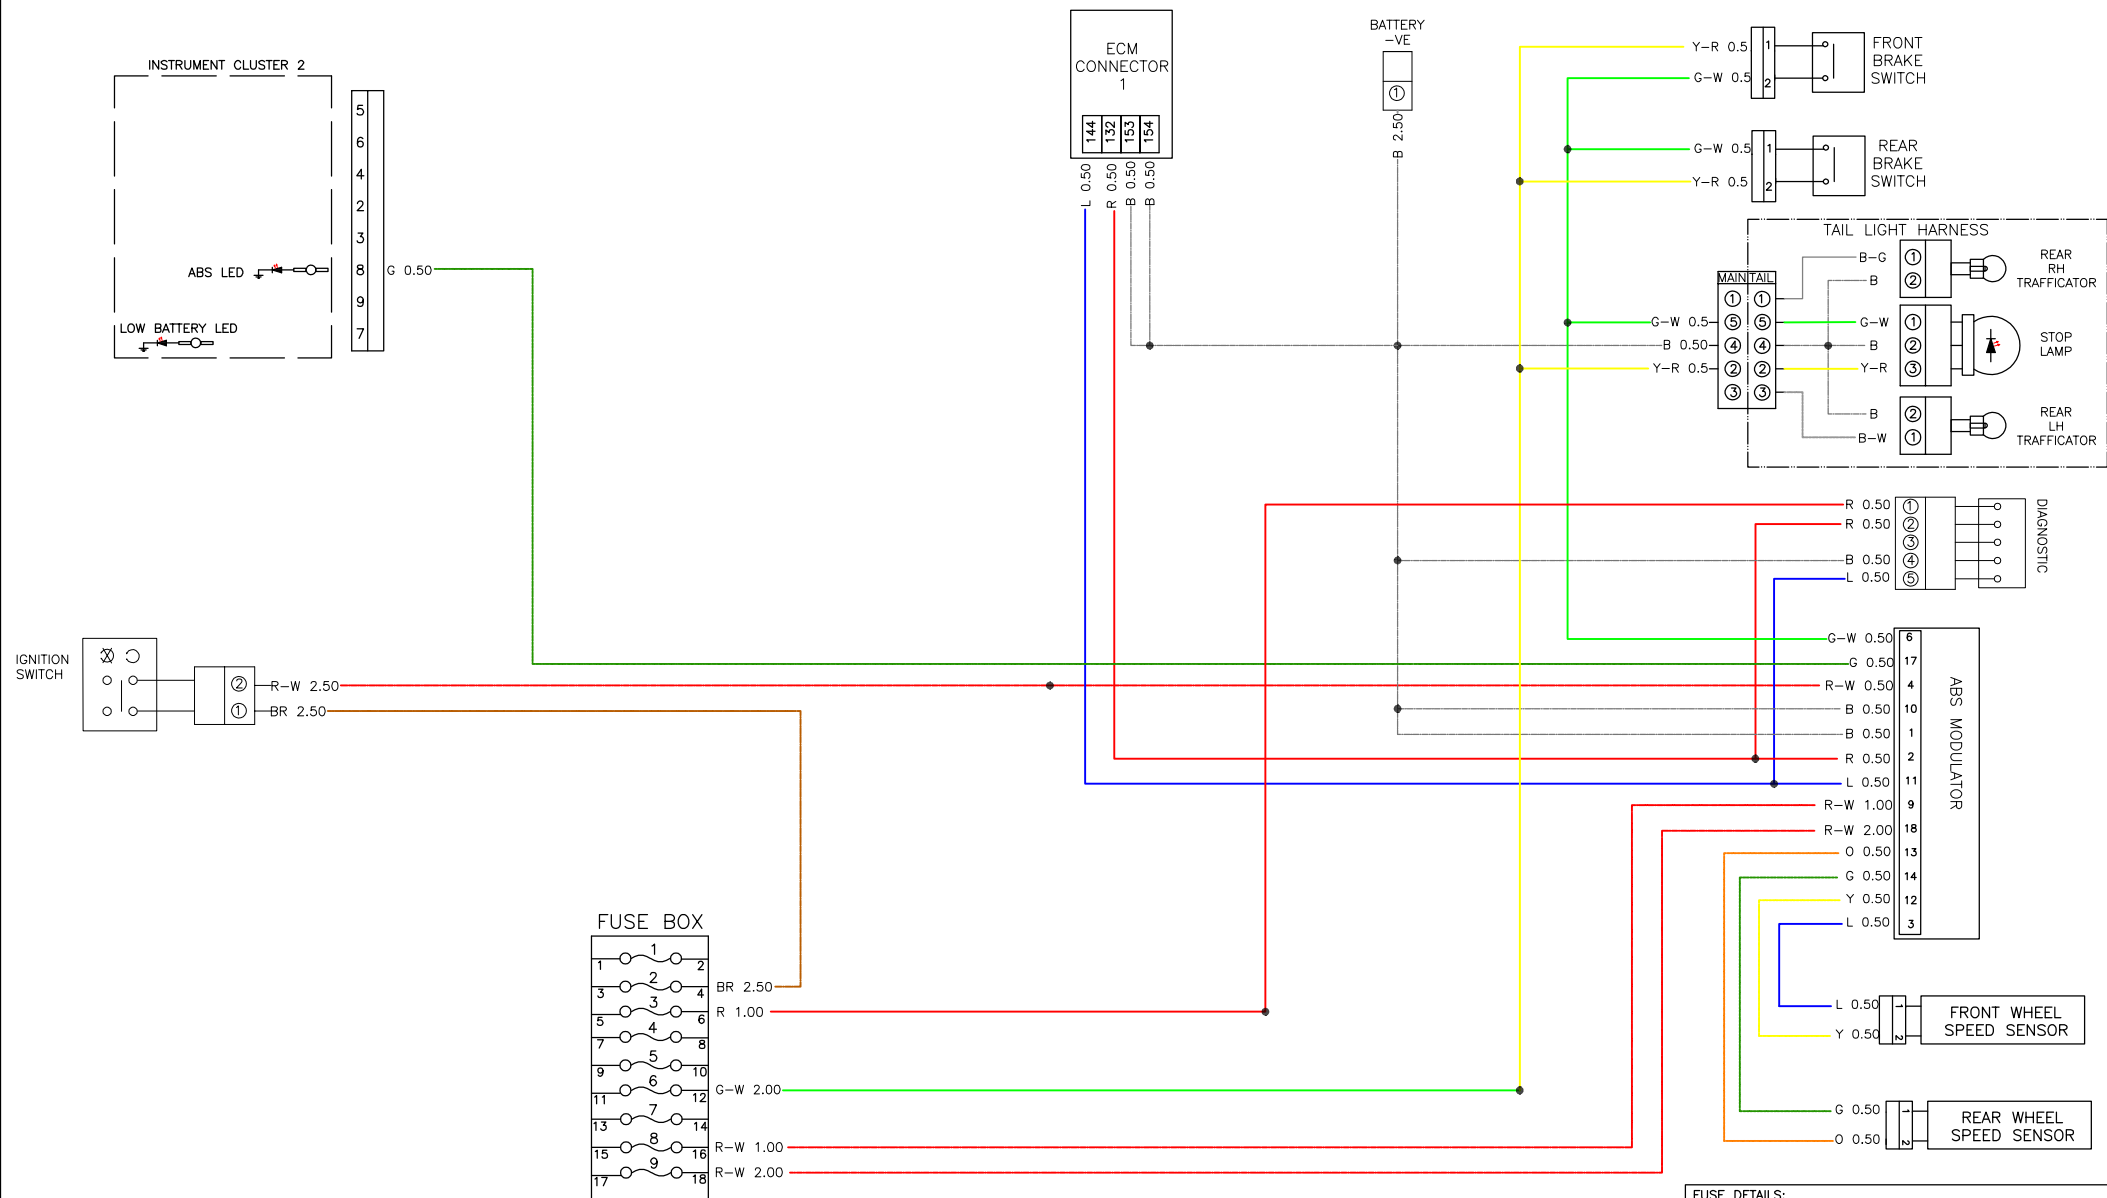

- FUSE DETAILS:**
- F1 – CHARGING FUSE – 30A (RR UNIT)
  - F2 – MAIN FUSE – 30A (ALL SUBSYSTEM FUSES AND LOADS)
  - F3 –
  - F4 –
  - F5 –
  - F6 – LIGHTING FUSE – 15A (HEADLAMP/SIDELIGHT/TAIL LAMP)
  - F7 –
  - F8 – ABS – 10A
  - F9 – ABS – 25A