


ROYAL ENFIELD NACS II DIAGNOSIS


11-B2.

Press **F2** to view System Information.

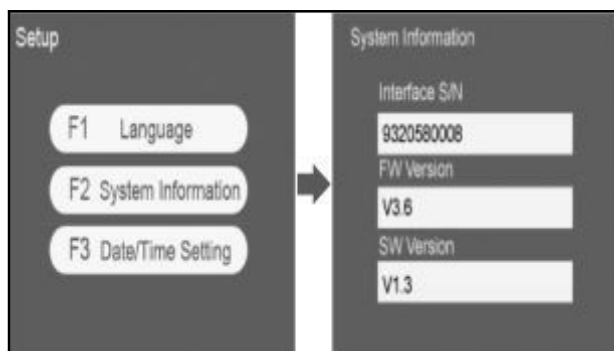


11-B3.

Press **F3** to set Date and Time.

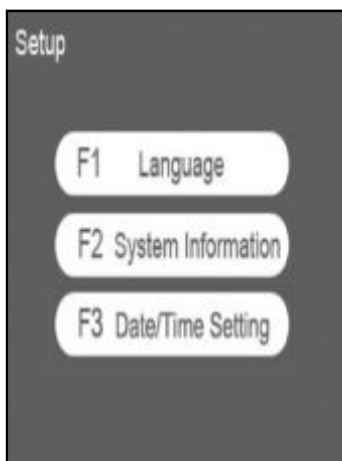

11-B4.

Using **←** and **→** to move the cursor. Press **OK** to select the item. Change figure using **↶** or **↷** and press **OK** to confirm the item. At this time, the pink block will return to white. Press **F4** to apply the setting.

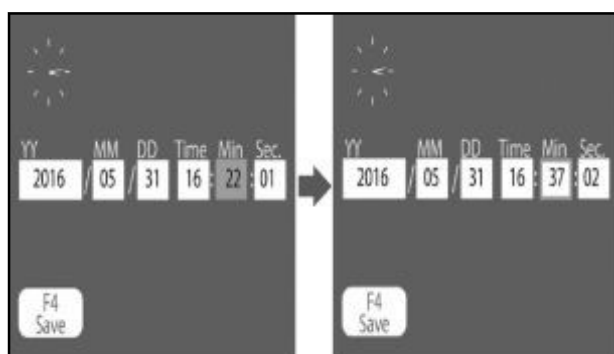

11-C.

ABS Functions


11-C1.

Select 'BOSCH ABS System'. Press **OK** to continue.




11-C2.

Select 'Special Function'. Then, select 'Repair Air Bleed'.

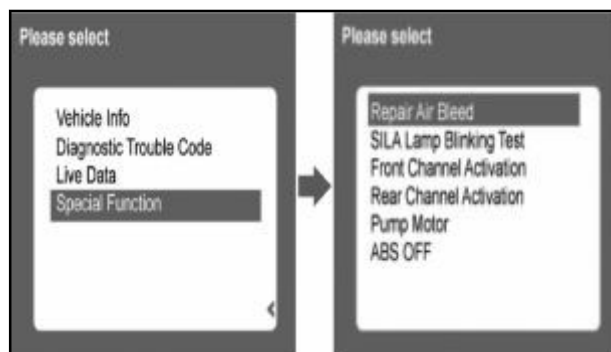

11-C3.


Read the warning first before start operating air bleeding.

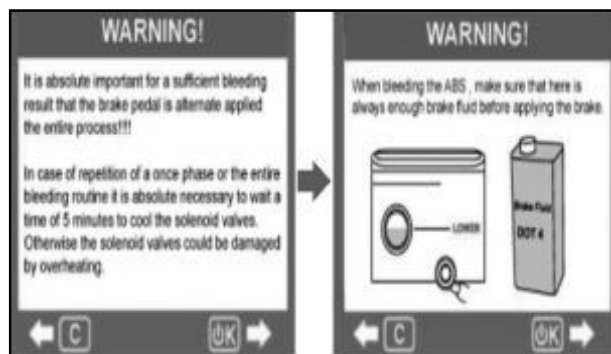

ROYAL ENFIELD NACS II DIAGNOSIS


11-C3.

Read the warning first before start operating air bleeding.

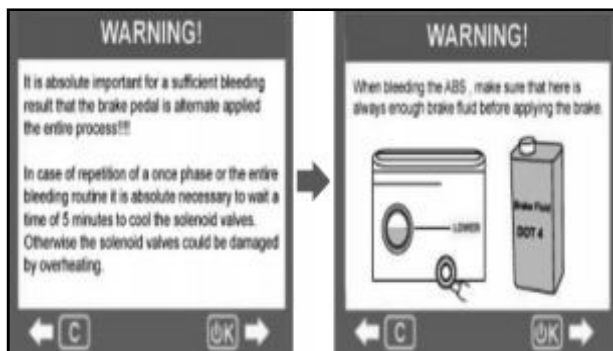

11-C6.

Front Channel Activation

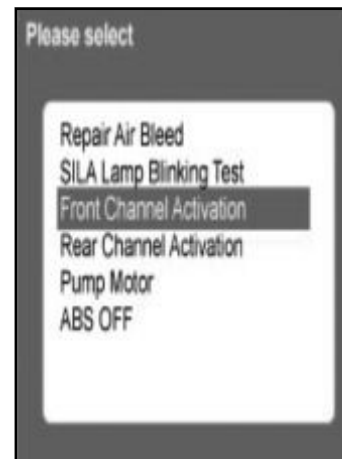


11-C4.

Follow each step on the screen to finish the procedure.



11-C7.

Follow the instructions on screen to finish the activation.

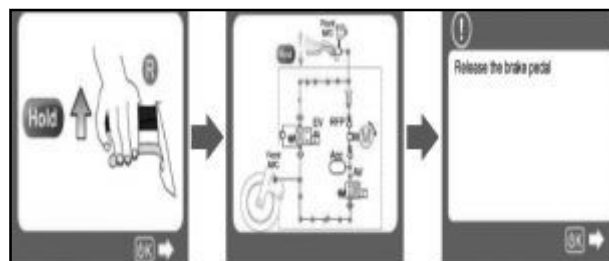

11-C5.

SILA Lamp Blinking Test

Follow the screen guide to finish the test.



11-C8.

Follow the instructions on screen to finish the activation.

